

# Straight Needle Valve Installation

**The straight needle valve allows for controlling the flow of air entering the ozonator. Controlling the flow of air may help to reduce the noise level of the ozonator.**

1. Disconnect power from the spa
2. Remove the equipment compartment door.
3. Remove air stone from the air intake of the ozonator.
4. Ensure that a piece of clear tubing (approx. 1 inch) is attached to both ends of the straight needle valve.
5. Attach air stone to one end of the clear tubing.
6. Attach the opposite clear tube to the ozonator air intake.
7. Attach the straight needle valve to the ozonator air intake. (Where you took the stone off).
8. Reconnect power to the spa.
9. Turn the air intake handle to adjust airflow.
10. Reinstall the equipment compartment door.

