

# INSTALLATION PROCEDURES

## Of the New Hot Spring® Control Head

### Removal

Separate damaged control head from control panel by unscrewing the four stainless steel screws on the back of the control head board.

### Installation

**Step 1.** Inside the new control head package, locate the new control head and spacers. See **Figure 1**

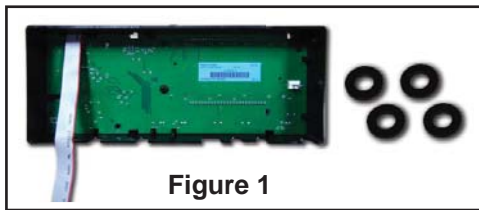


Figure 1

**Step 2.** Locate the mounting holes on the control head and use tape or glue to place the spacer over the mounting holes. If tape is used, puncture a starting hole through the tape. See **Figure 2**

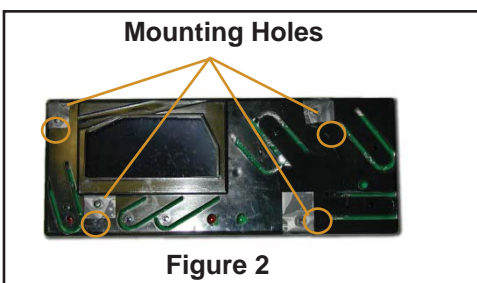


Figure 2

### NOTE

Spacers must be placed between the control head and the control panel. See **Figure 3**

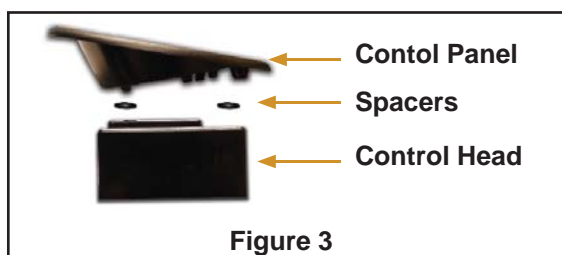


Figure 3

**Step 3.** Mount the control head onto the control panel. Inset stainless steel screws and gently tighten the screws in a criss-cross pattern, do not over tighten. See **Figure 4**

### WARNING

Over tightening the screws WILL cause random activation of the jet and/or light.


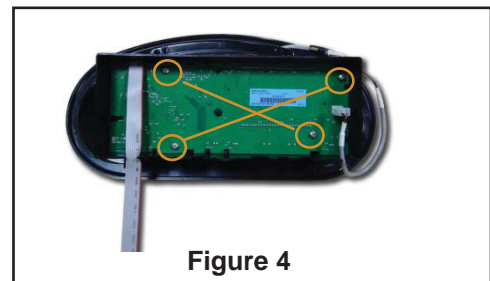


Figure 4

**Step 4.** Install the control head assembly to the control box.

### NOTE

The new control head will have the red stripe oriented towards the top of the control box. See **Figures Old and New**

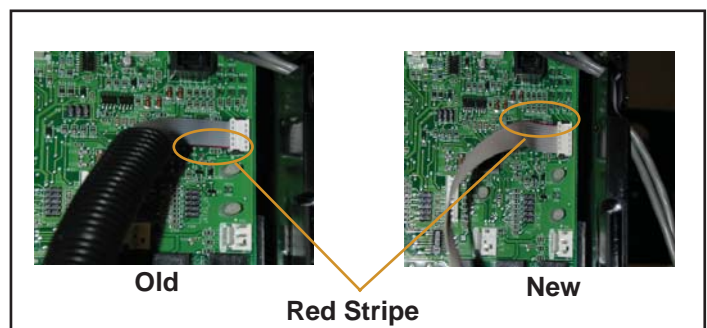

Old

Red Stripe

New