

Multi-Bracket Installation

Materials Required:

- 1 – Multi Bracket
- 1 – Front Shield
- 1 – Mutli-Bracket Installation Instructions
- ABS Glue

Important: In order to remove the Multi-Bracket from the Front Shield, it will be necessary to break the glue joints. Being careful not to crack the Lock Nuts, detach the four posts on the Front Shield from the four slots in the Multi-Bracket. Discard both parts after removal.

Installing Multi-Bracket:

1. Position the Multi-Bracket behind the DreamJet® massage system plumbing assembly.
2. Slide the Multi-Bracket onto the Lock Nuts (Figure 1). It will be necessary to bend the center of the Multi-Bracket over the Hard Stops. Flex the Spring Bars forward and seat them on the Hard Stops (Figure 2).
NOTE: Over-Bending the Spring Bars may cause them to crack or break. Do not over-bend.
3. Apply a small amount of ABS glue to Front Shield posts (Figure 3).
4. Line up the posts of the Front Shield with the slots of the Multi-Bracket and glue into place (Figure 4). Do not allow glue to make contact with the Lock Nuts. Hold Front Shield in place for 45 seconds to allow glue to set.
5. Drying time for ABS glue is approximately 24 hours (depending on temperature and weather conditions).

Figure 1

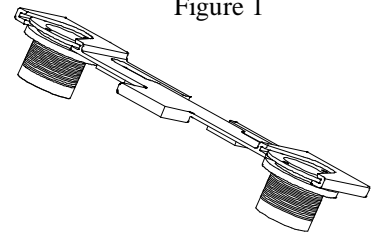


Figure 2

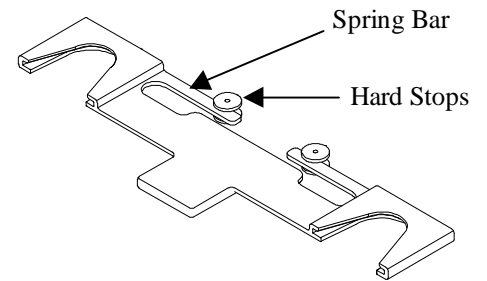


Figure 4

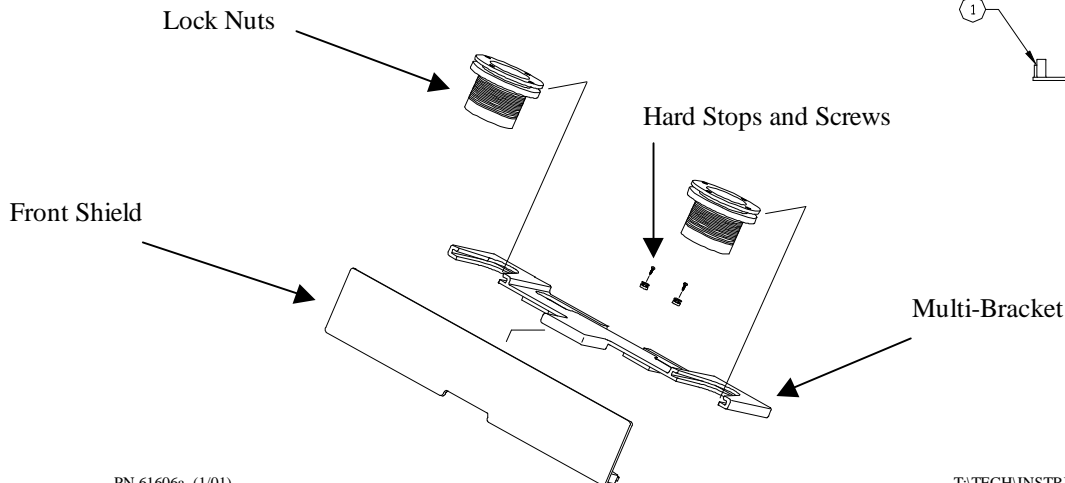


Figure 3

