

Flat Pack System Power Supply and Power Supply Adaptor Replacement Instructions

(IMPORTANT: READ THESE INSTRUCTIONS FIRST)

Kit Includes:

- Power Supply
- Power Supply Adaptor



Power Supply



Power Supply Adaptor


STEP:

1. **DISCONNECT ALL POWER TO THE SPA.**
2. Remove the spa equipment compartment door.
3. Remove the cover from the control box.

Make sure the following parts have been connected:

4. Female Quick Disconnect Y Adaptors to APM P35 & P23 in the control box.
5. the Wire Harness Assembly to the Amplifier Harness.


STEP 6

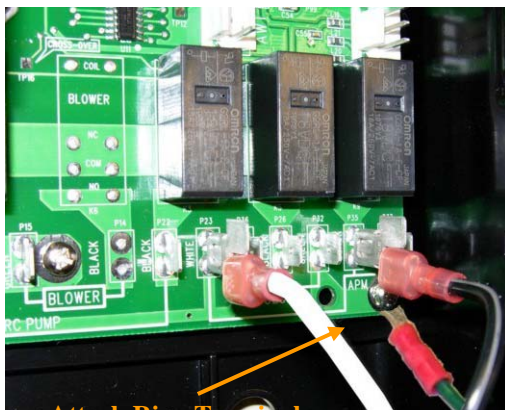

Attach Ring Terminal


Remove the plug in the bottom right hole in the control box. Feed the power wires from the Power Supply through this hole, and attach them to the Y Adaptors in the control box. Attach the ring terminal to the corner screw (as shown in the picture).

STEP 7

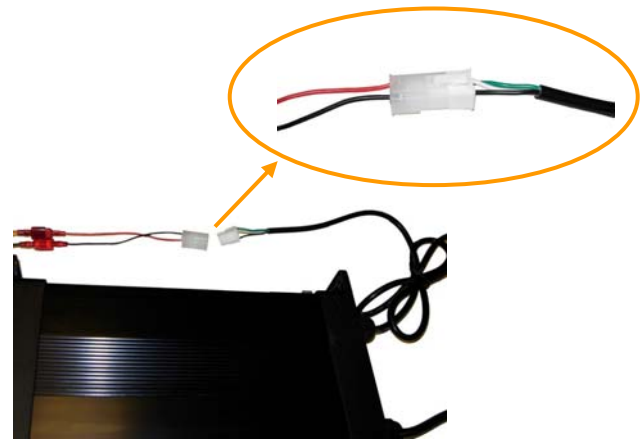

Attach the Power Supply Adaptor to the Power Supply.

STEP 8

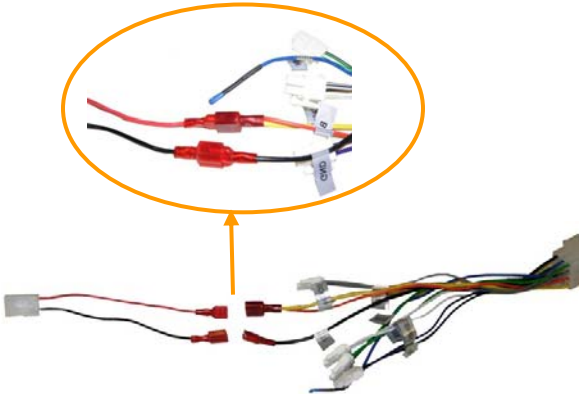

Join the Wire Harness
Assembly and the Power
Supply Adaptor together: **red
to red** wire and **black to black**